Manual

7/5/2025

SIPEREA

Scalable Imaging Platform for AREA measurement, for vast and endless expansion

Version 1.2

Contact: Sang-Kyu Jung (skjung@hongik.ac.kr)

at Hongik University (Sejong, Korea)


MOBILE HOTSPOT NETWORK SETTINGS



Set up a hotspot network on your PC


Step 1: Go to Settings and then “Network & internet”

Step 2: Enable Mobile hotspot

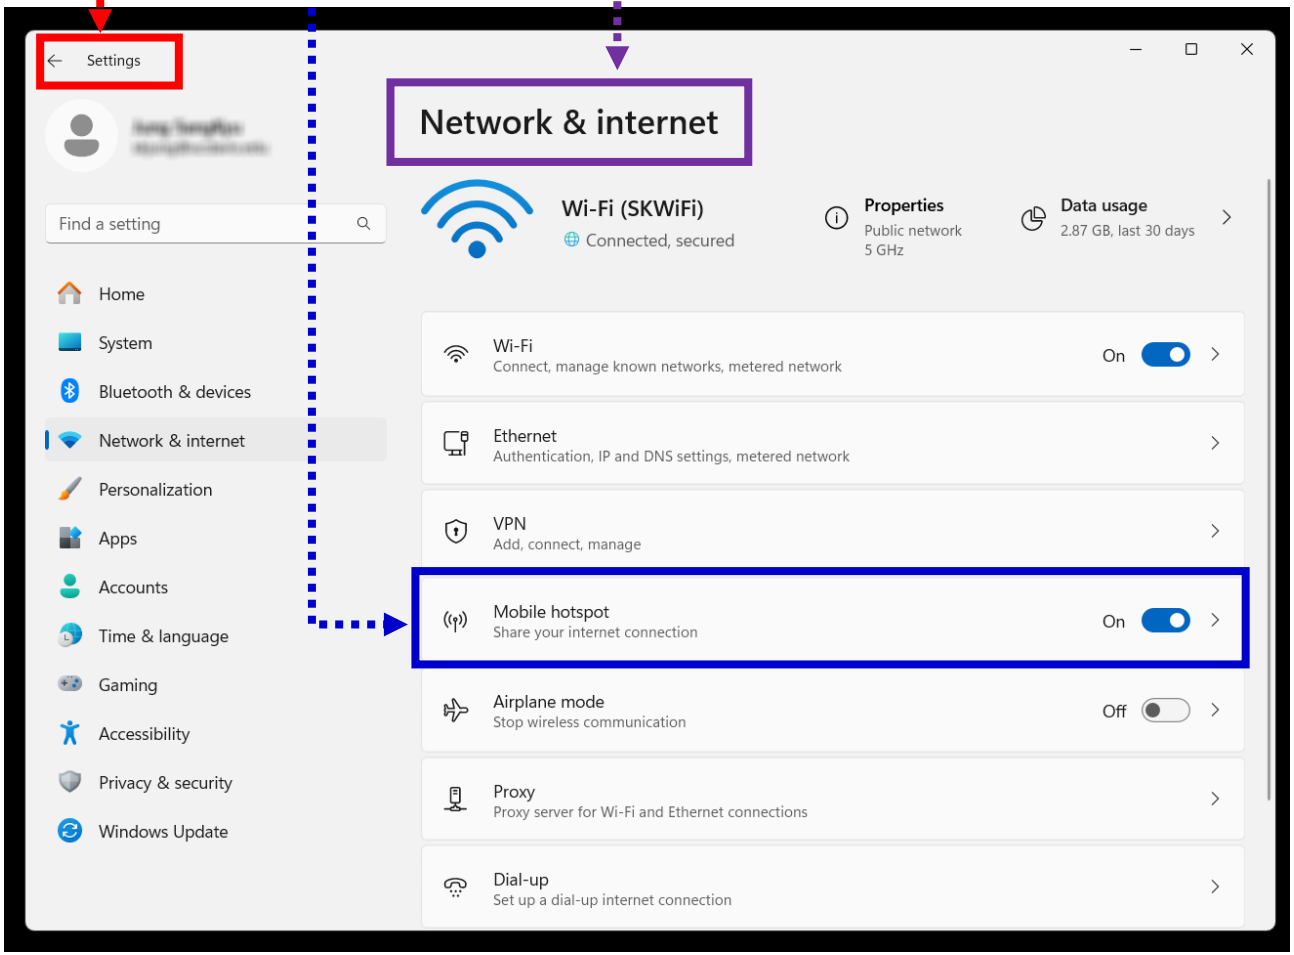

Set up a hotspot network on your PC

Step 3: Click the “Edit” button

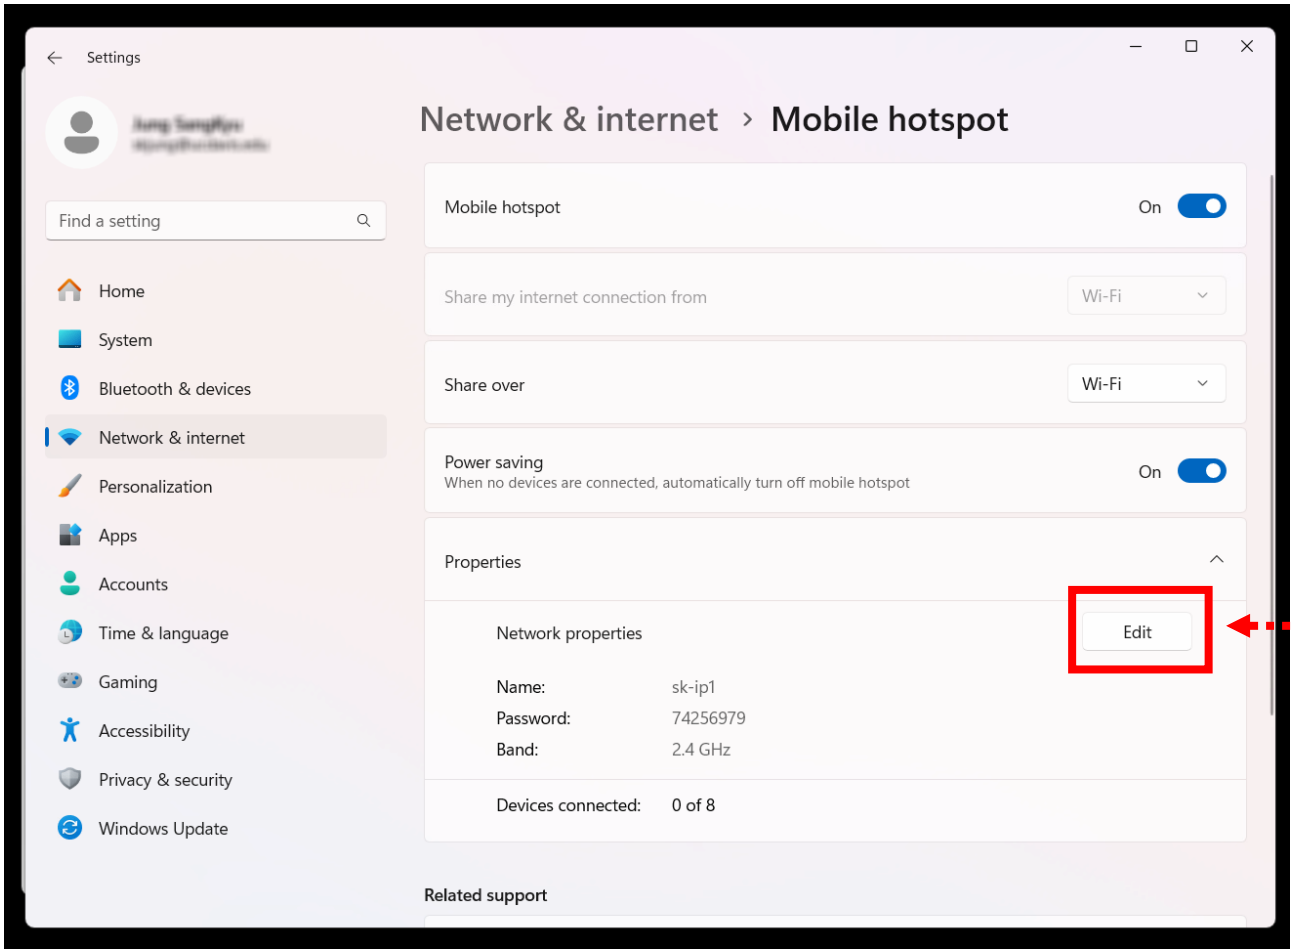


Set up a hotspot network on your PC

Step 4: Enter “sk-ip1”, “74256979”, and select “2.4GHz”

Step 5: Click the “Save” button

When hotspot is enabled, all ESP32-CAMs will connect to this hotspot network.

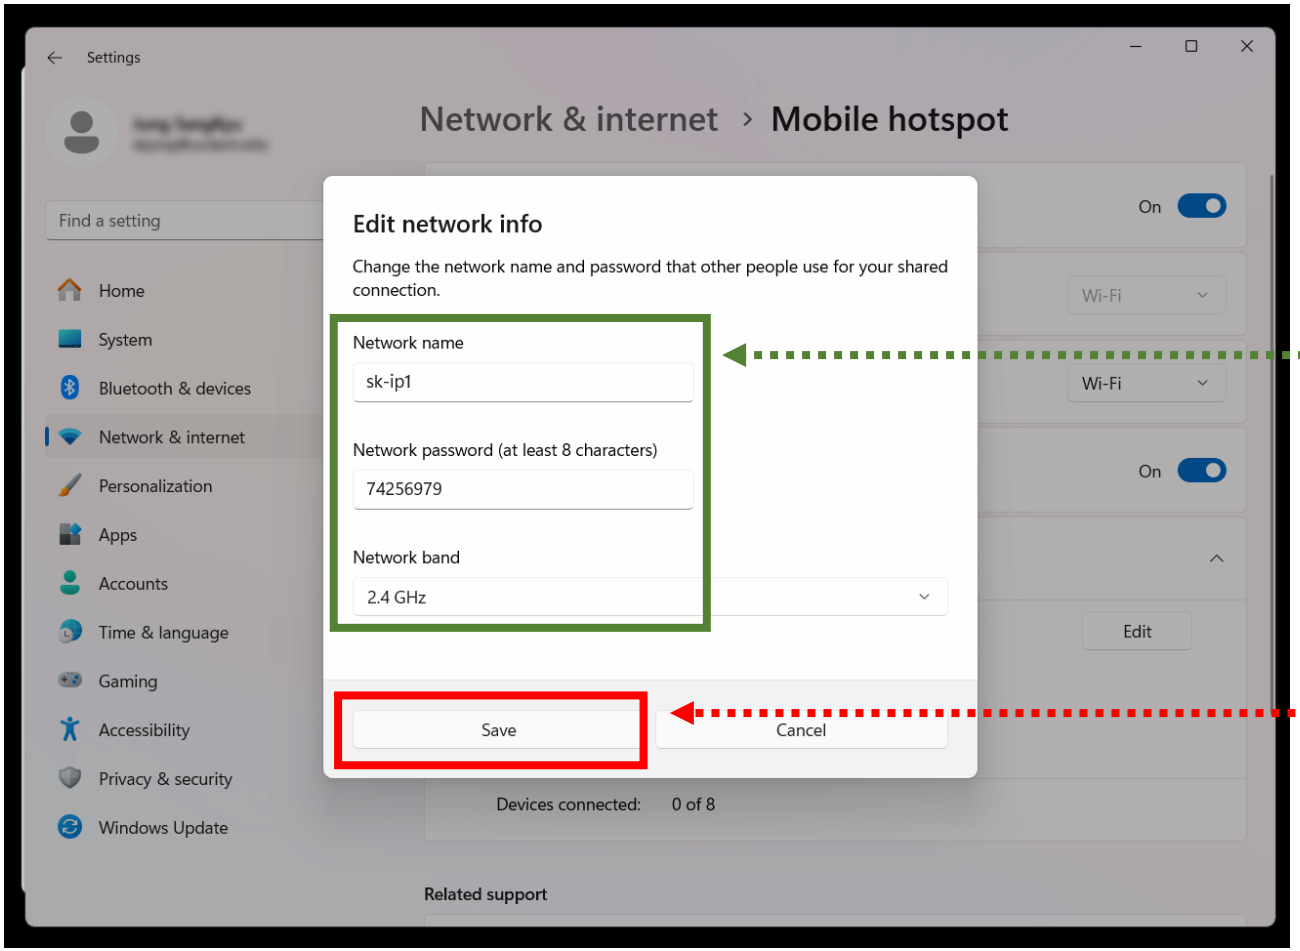

ESP32-CAM SETTINGS



Set up ESP32-CAM



ESP32-CAM

Shield module



Insert the ESP32-CAM into the shield module and connect the USB cable.

Set up ESP32-CAM

- Set up the Arduino IDE program environment for ESP32-CAM programming. Then open ESP32CAM_SIPEREA.ino and set the deviceID and IP address information as needed.




The static IP address of ESP32-CAM is **192.168.137.102**

local_IP_prefix deviceID

Set up ESP32-CAM

- Select the ESP32-CAM board, set the port number of the device, etc., then click the upload button to upload the program to ESP32-CAM.

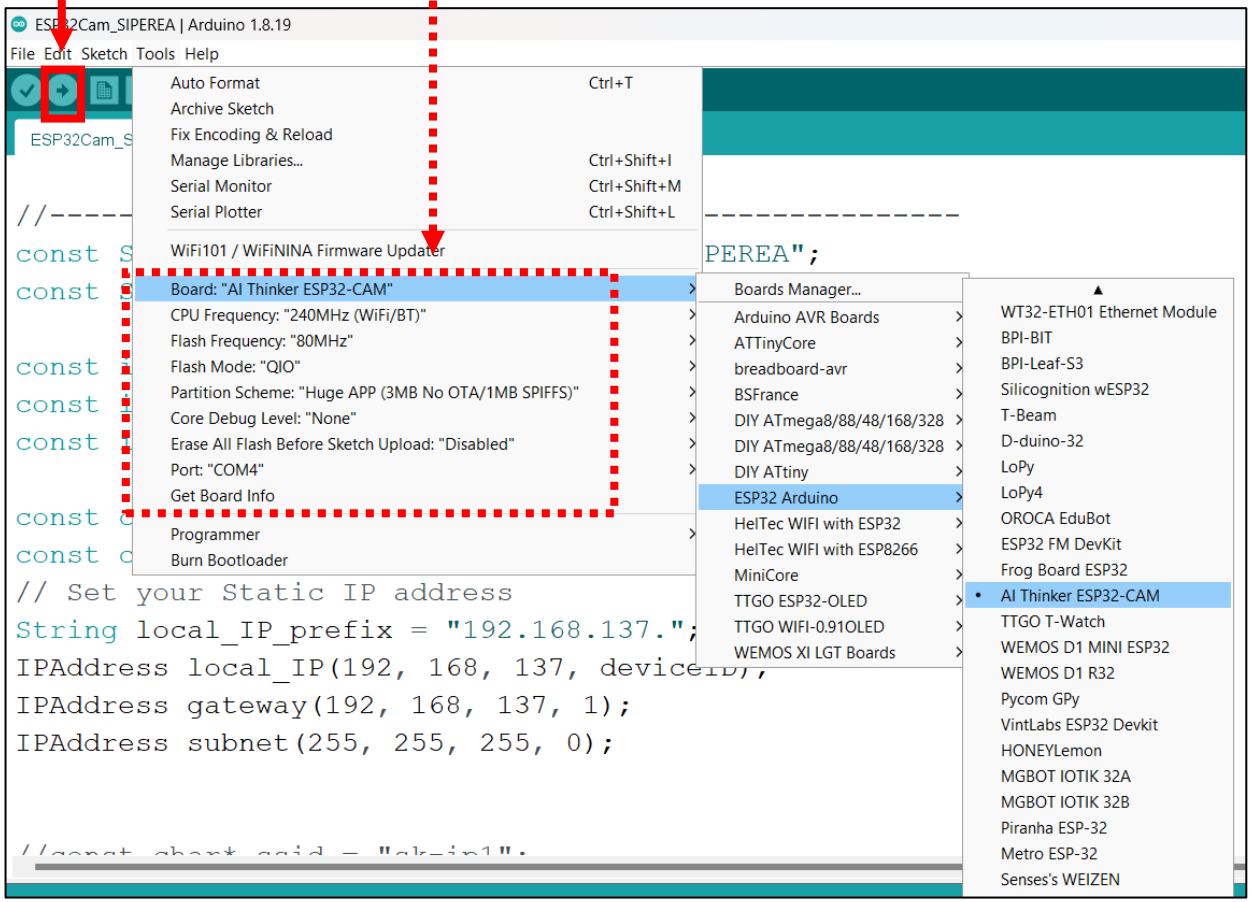

Set up ESP32-CAM

- After the program upload to ESP32-CAM is completed, ESP32-CAM attempts to connect to the designated mobile hotspot.
- If the ESP32-CAM successfully connects to the mobile hotspot and receives the same address as the static IP address set, the ESP32-CAM's LED blinks once. If it fails, the LED blinks three times.

IMAGING HARDWARE SETTINGS




Set up imaging hardware

The four ESP32-CAMs for imaging have the following fixed IP addresses.

http://192.168.137.100
http://192.168.137.101
http://192.168.137.102
http://192.168.137.103


One ESP32-CAM is used to control an auxiliary light for dark imaging

http://192.168.137.104

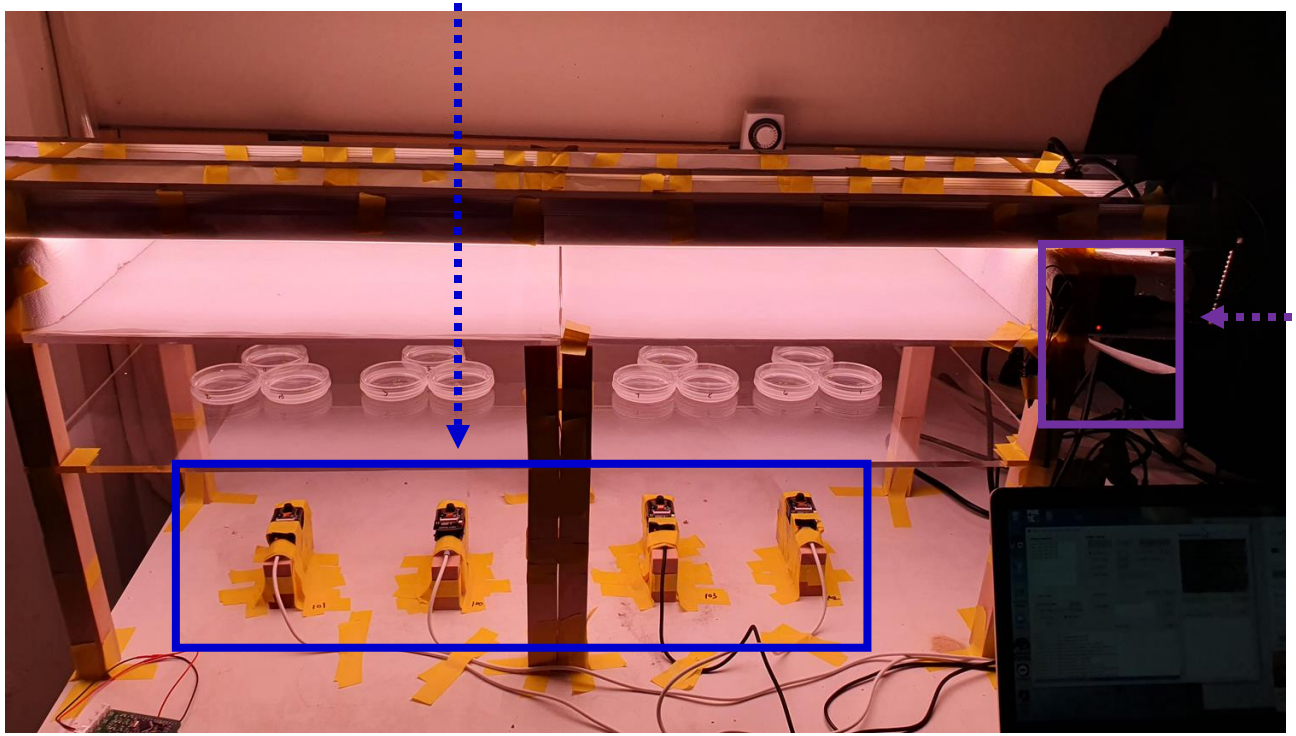

Auxiliary LED light for dark imaging

- There are two optional modules to control the auxiliary USB LED strip light:

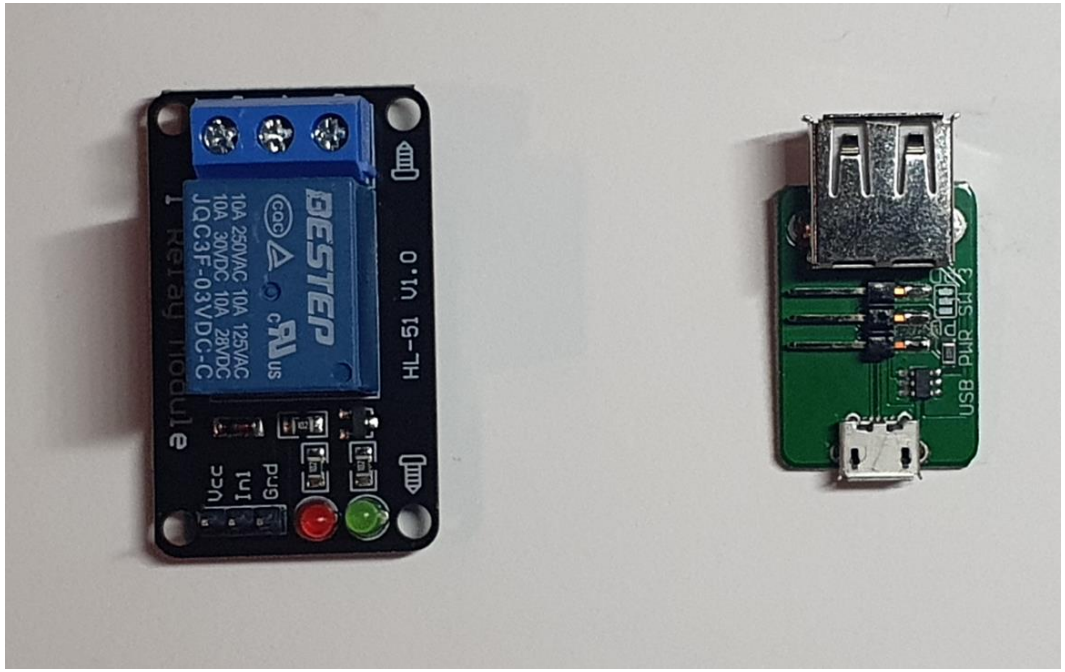



3.3V relay module

Power switch module (SKU: 648-1, Pi Shop Inc., DE, USA)

Auxiliary LED light for dark imaging

- Wiring connection between ESP32-CAM and power switch

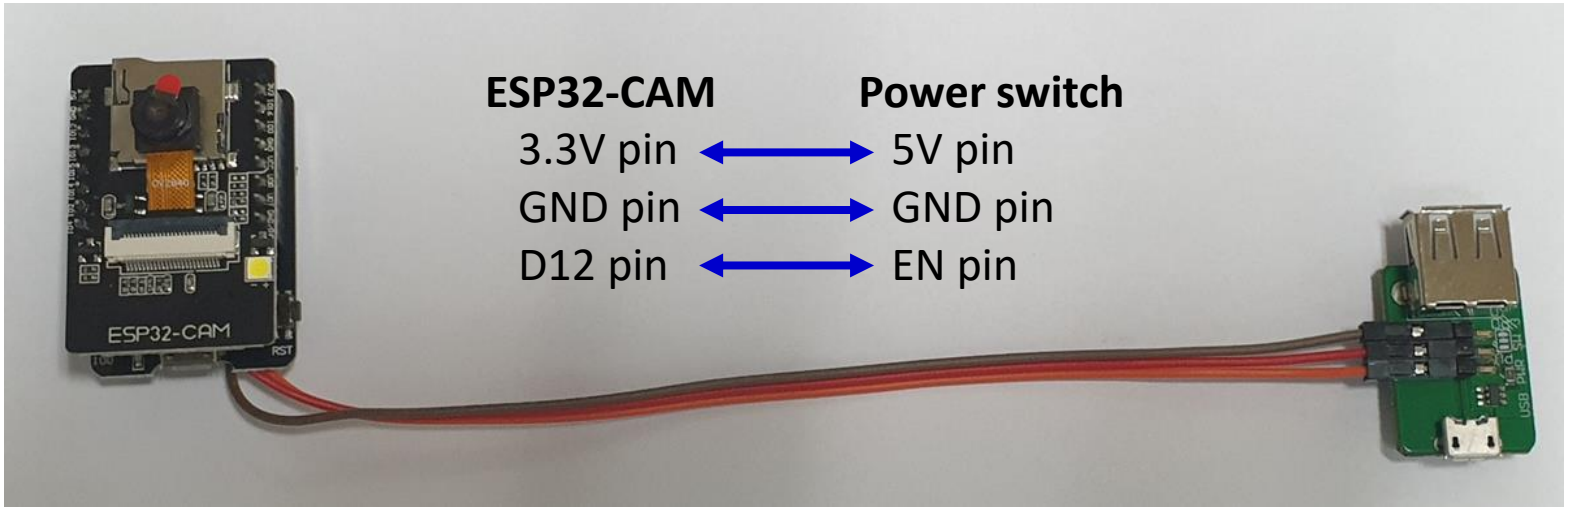

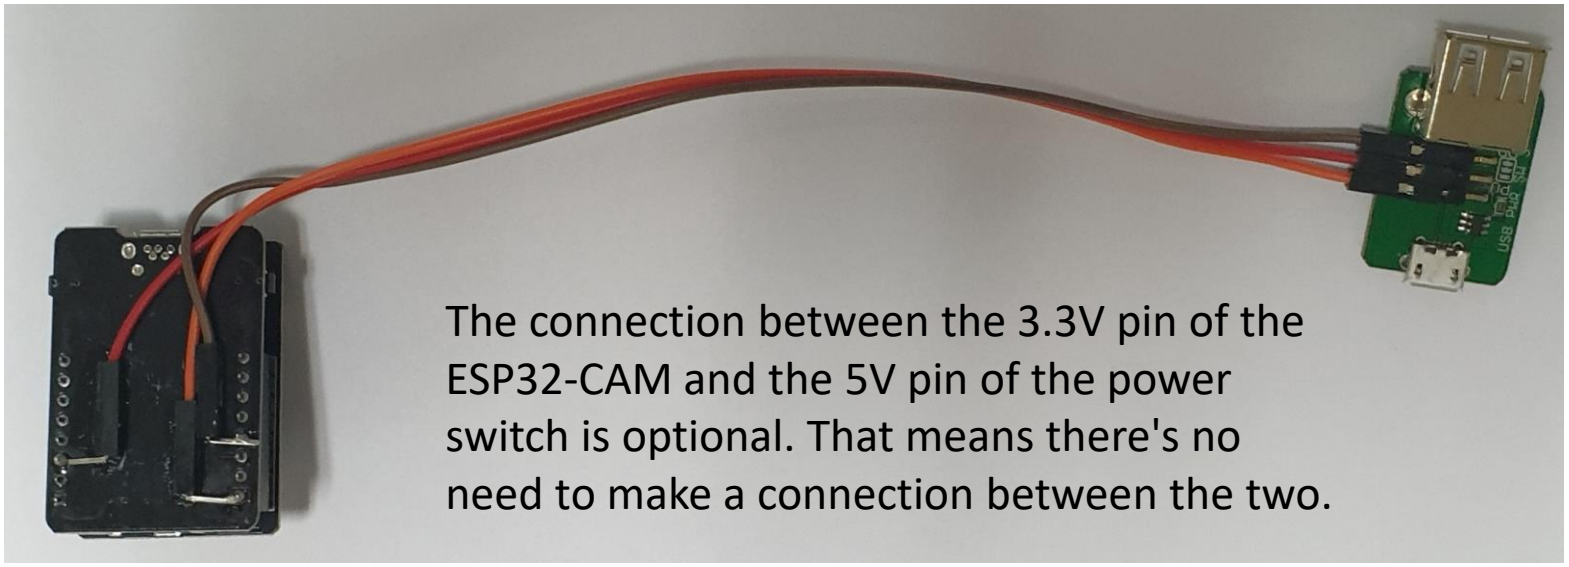


Auxiliary LED light for dark imaging

- Wiring connections between ESP32-CAM, power switch, and USB LED strip



Auxiliary LED light for dark imaging

- Wiring connection between ESP32-CAM and relay module

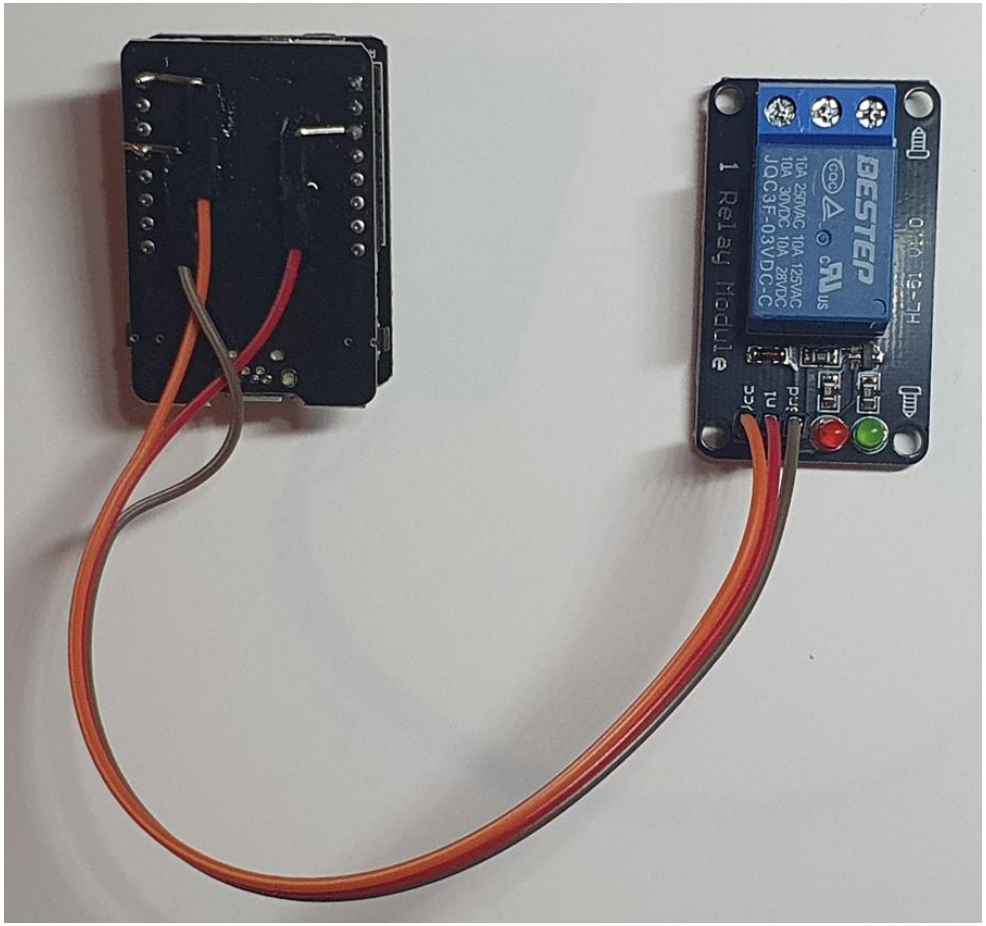

ESP32-CAM		Relay
3.3V pin	⟷	VCC pin
GND pin	⟷	GND pin
D12 pin	⟷	IN pin

The connection between the 3.3V pin of the ESP32-CAM and the VCC pin of the power switch is mandatory for the relay module.

IMAGE ACQUISITION PROGRAM SETTINGS



Image acquisition program

Step 1: Enter IP addresses of ESP32-CAMs for imaging and lighting (auxiliary LED light)

Step 2: Set destination folder for captured images

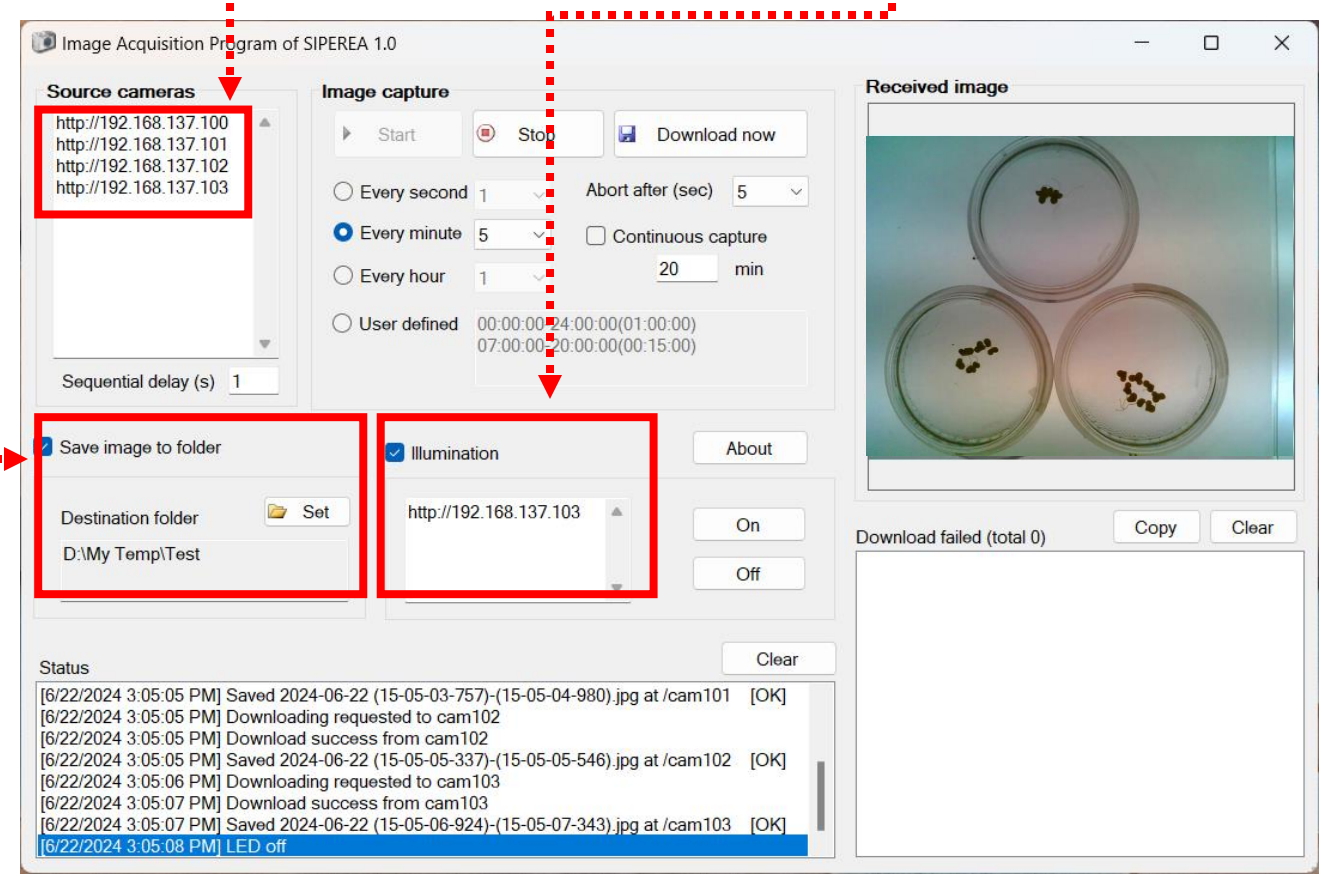


Image acquisition program

Step 3: Set imaging time interval

Step 4: Click the "Start" button to start imaging.

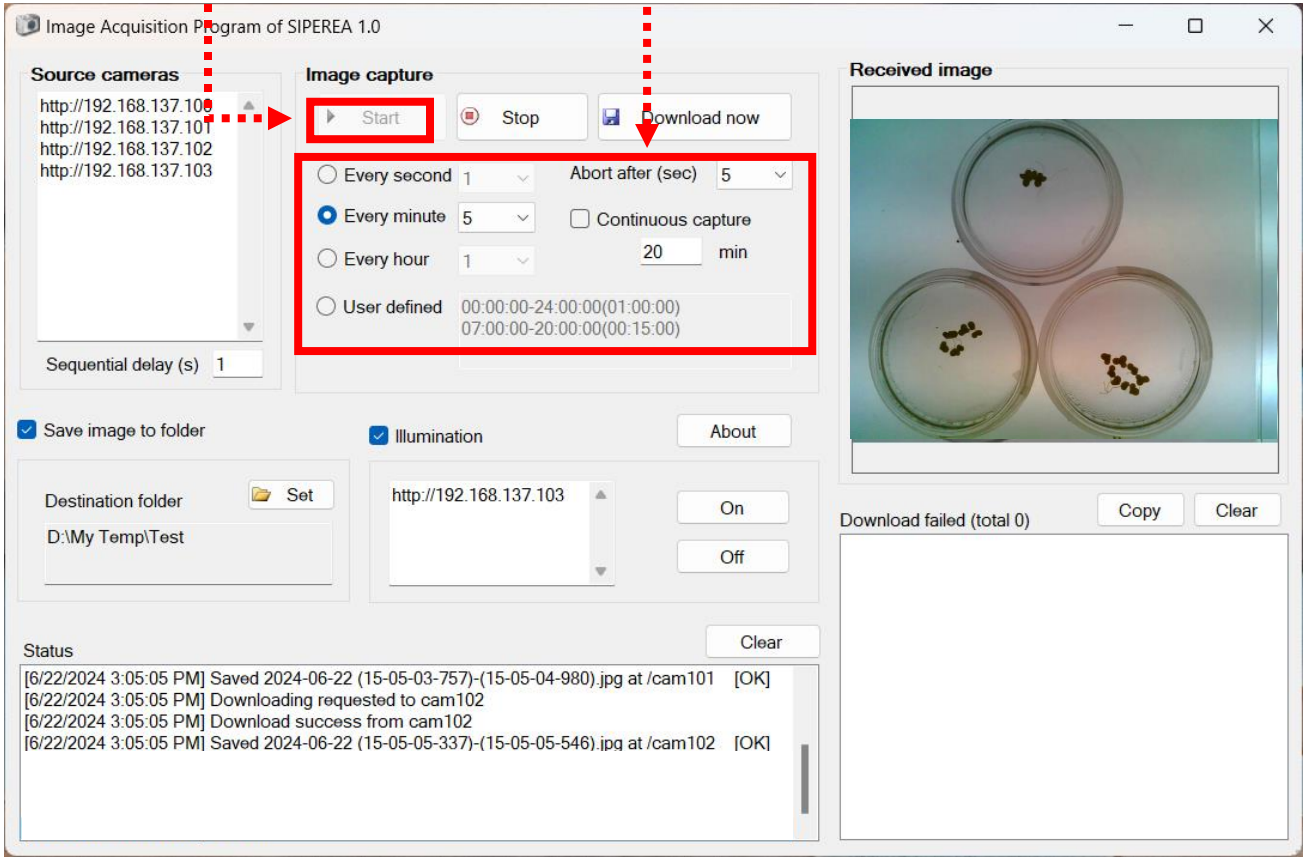


Image acquisition program

AutoImageCapture creates subfolders based on the last three digits of the ESP32-CAM's IP address. Users can view captured images in subfolders.


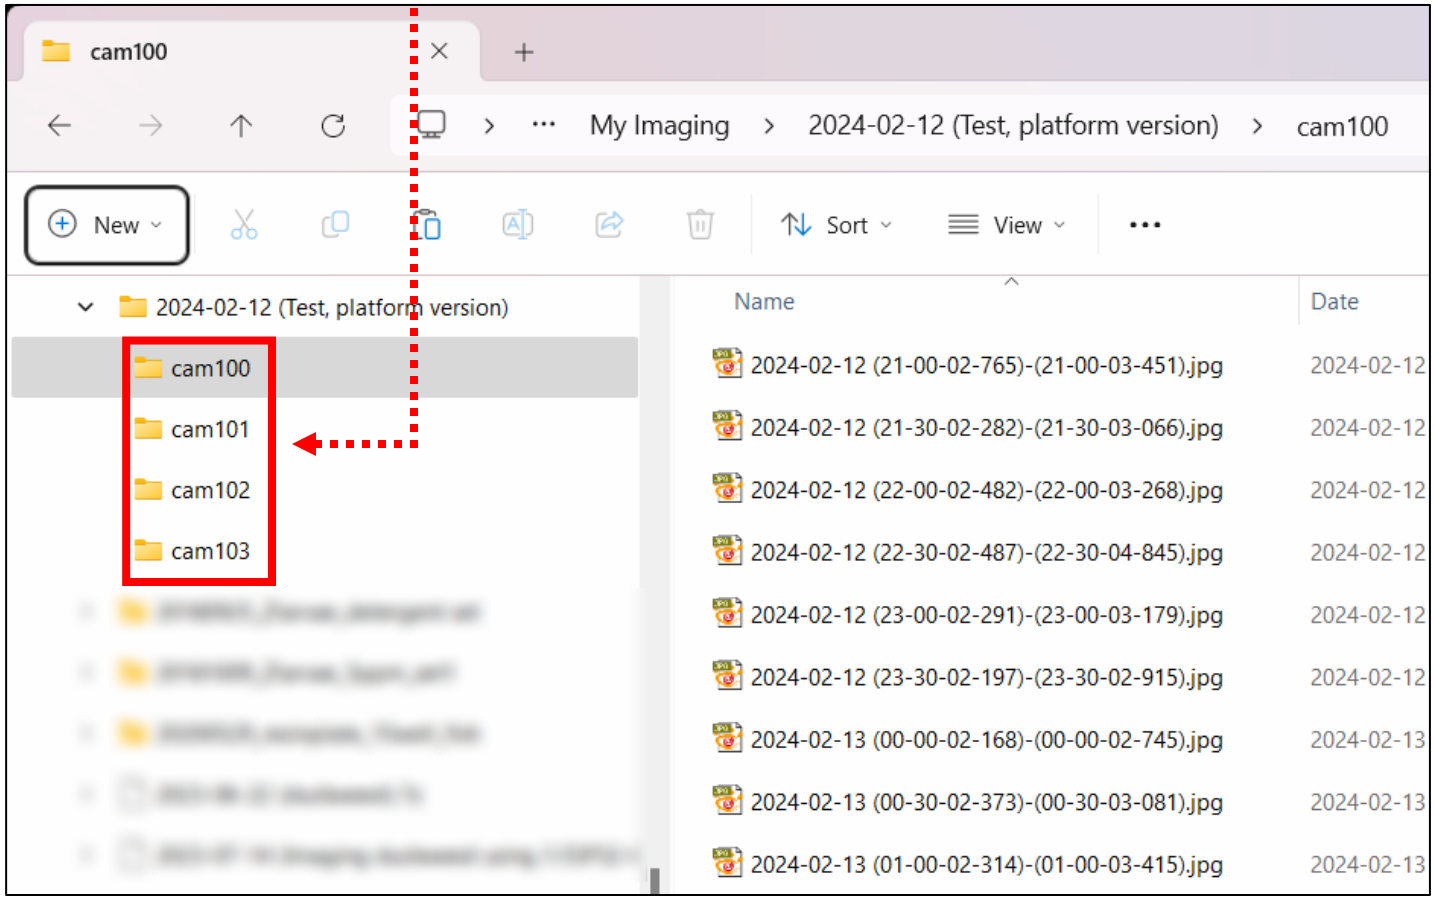


IMAGE ANALYSIS PROGRAM SETTINGS



Image analysis

To analyze images with the image analysis program, the user must first create ROI.csv and place it in the source folder.

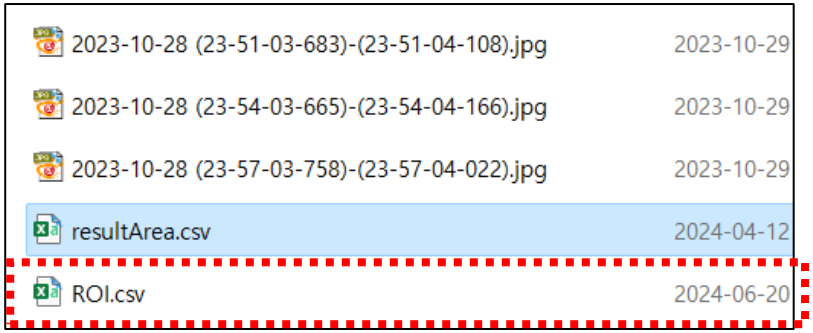

	A	B	C	D	E	F	G	H	I	J	K
1	Condition1	Condition2	Date	Plate#	Well#	Shape	X1	Y1	X2	Y2	
2	Batch1			1		circle	151	401	471	722	
3	Batch1			2		circle	553	387	892	710	
4	Batch1			3		circle	339	29	671	356	
5											
6											

Please refer to the next section for instructions on how to create ROI.csv.

Image analysis

Step 1: Click the browse button and select the folder containing the images.

Step 2: If you want to view the processed images, check the checkbar.



Step 3: Click the Analyze button to start batch processing for image analysis.

Image analysis

Clicking the Analyze Log button displays the current progress.


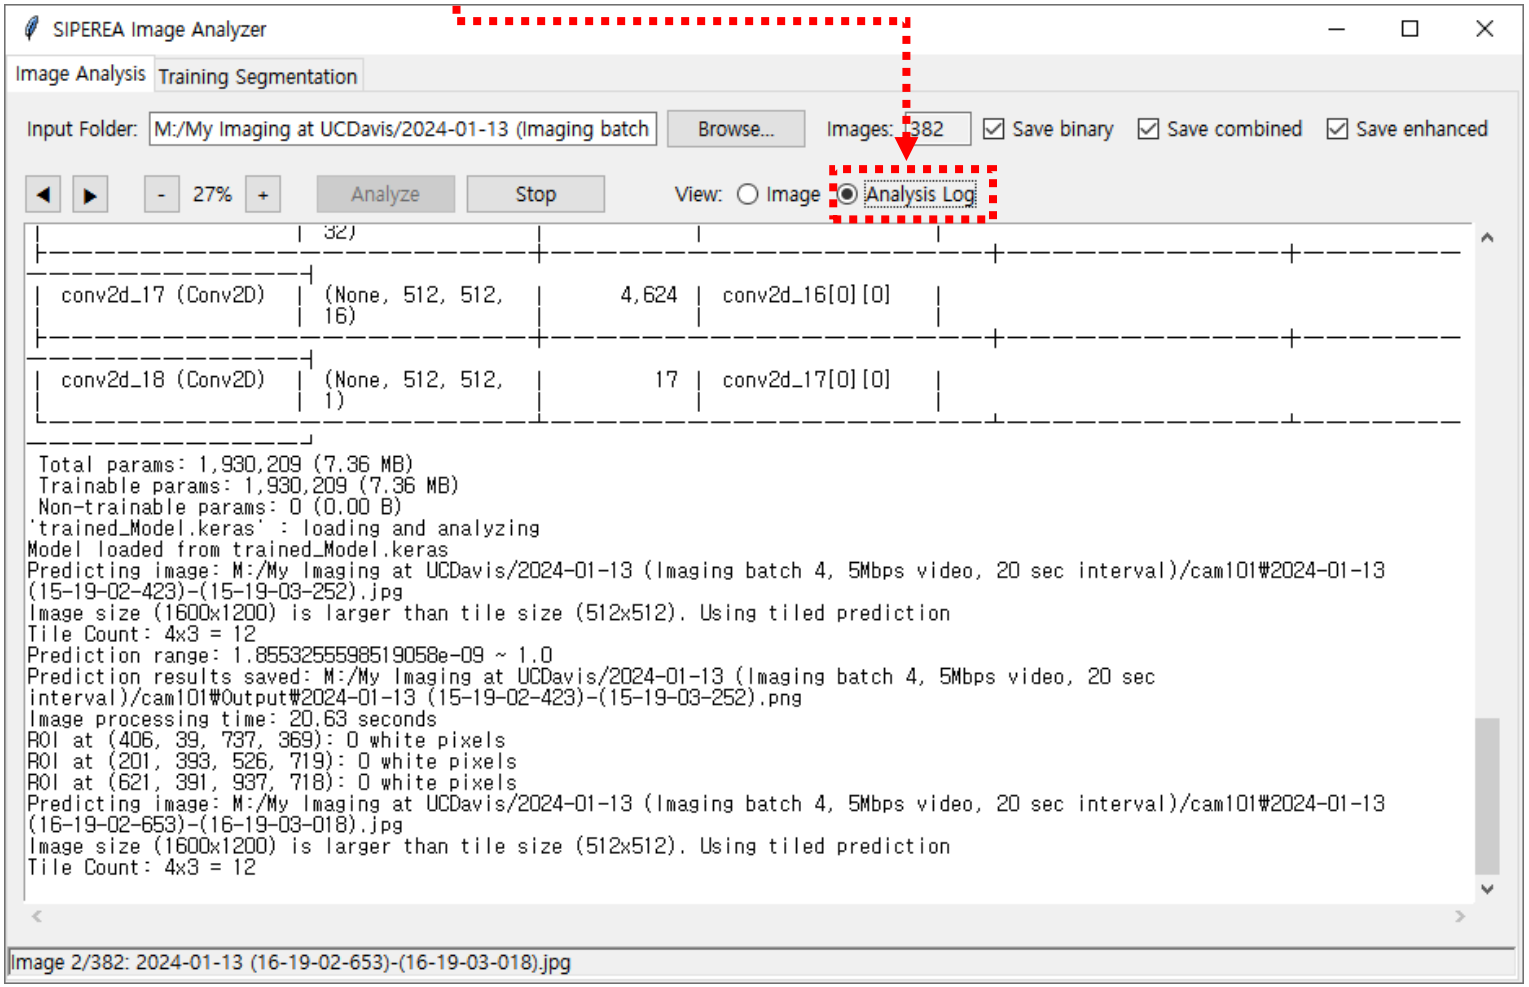


Image analysis

When batch processing is completed, a 'resultArea.csv' file is created in the image folder.

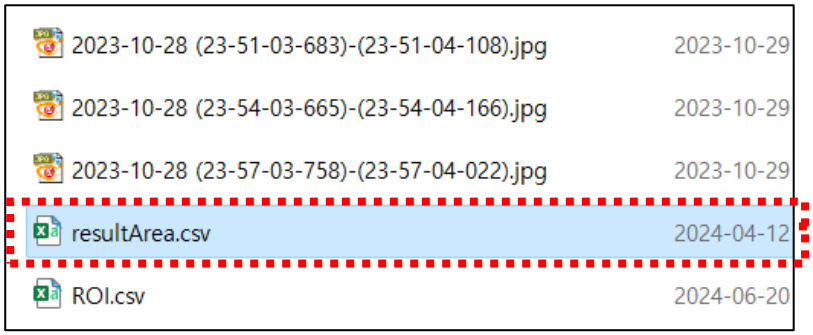


Area value by ROI (by well)

	A	B	C	D	E
1	File name	Time(day)	Batch1||P1	Batch1||P2	Batch1||P3
2	2023-10-16 (13-34-24-000)-(13-34-24-385).jpg	0	515	222	510
3	2023-10-16 (13-36-03-791)-(13-36-04-338).jpg	0.001	469	244	487
4	2023-10-16 (13-39-03-860)-(13-39-04-250).jpg	0.003	472	269	469
5	2023-10-16 (13-42-04-102)-(13-42-04-540).jpg	0.005	462	222	510
6	2023-10-16 (13-45-03-784)-(13-45-04-313).jpg	0.007	506	213	532
7	2023-10-16 (13-48-04-048)-(13-48-04-610).jpg	0.009	473	271	473
8	2023-10-16 (13-51-03-768)-(13-51-04-398).jpg	0.012	483	214	524
9	2023-10-16 (13-54-04-080)-(13-54-04-884).jpg	0.014	484	263	473
10	2023-10-16 (13-57-03-745)-(13-57-04-168).jpg	0.016	521	227	510
11	2023-10-16 (14-00-04-054)-(14-00-04-667).jpg	0.018	525	229	508
12	2023-10-16 (14-03-03-638)-(14-03-04-555).jpg	0.02	477	275	470
13	2023-10-16 (14-06-04-041)-(14-06-04-847).jpg	0.022	486	218	531
14	2023-10-16 (14-09-03-855)-(14-09-04-275).jpg	0.024	470	238	490


Training model with custom images

Prepare source images of size 512×512 pixels along with their corresponding binary mask images.

Original images

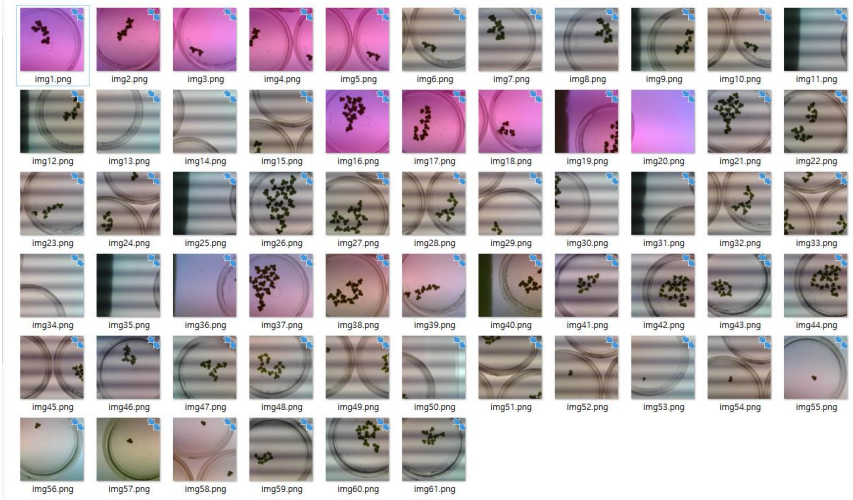


Mask binary images

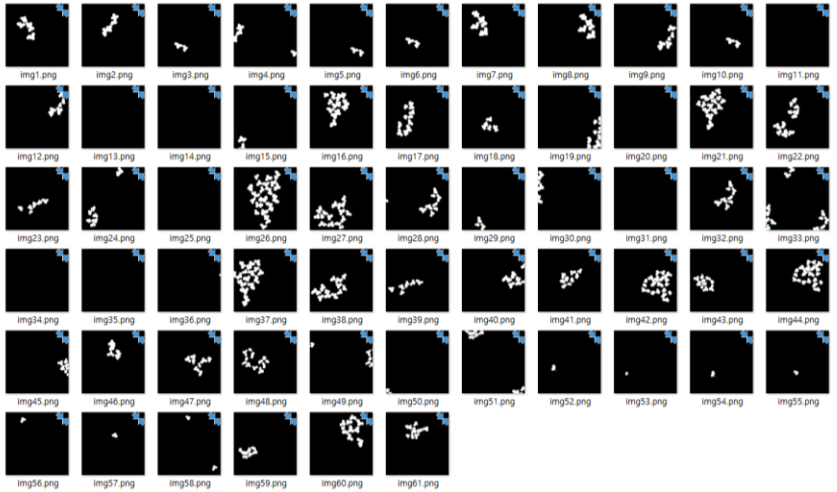

Training model with custom images


Step 1: Specify the image folders.

Step 2: Set the training options.

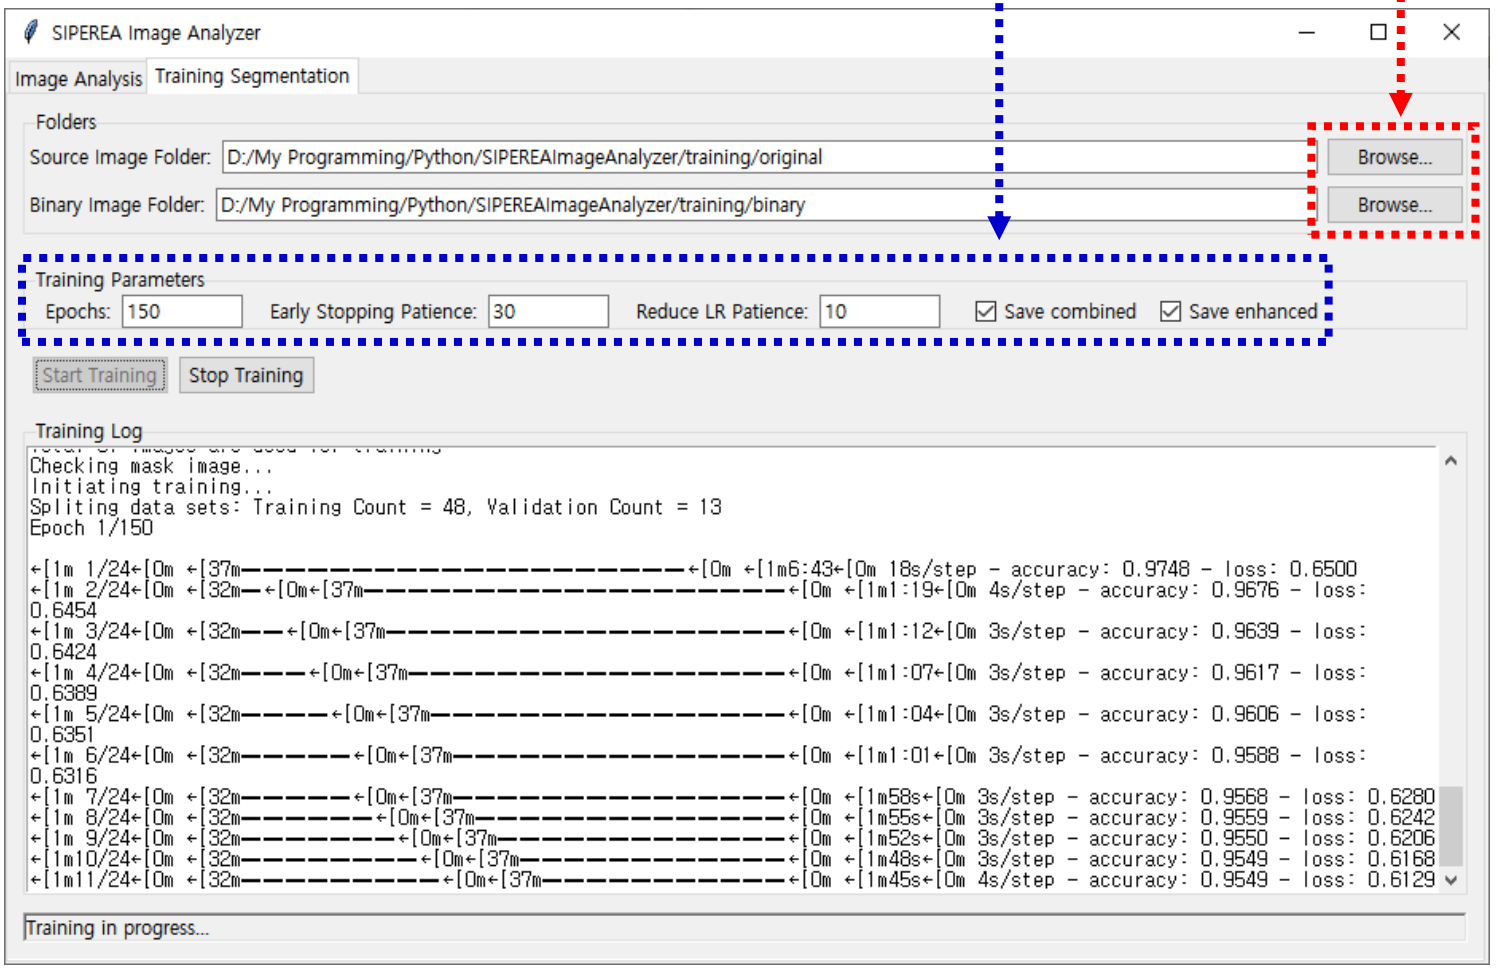

Training model with custom images


When training is complete, two files are generated: bestTrained_Model.keras and current_Best_Model.keras. Copy or rename bestTrained_Model.keras to trained_Model.keras. The image analysis program loads trained_Model.keras to perform image analysis.

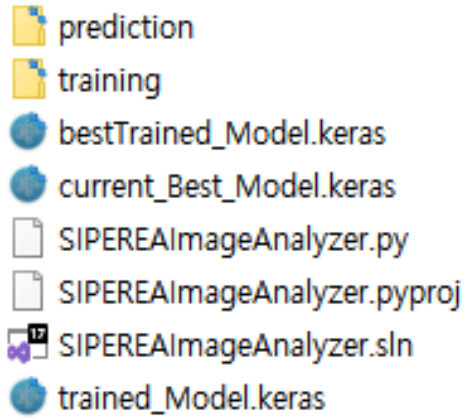

ETC.



ROI.csv file generation

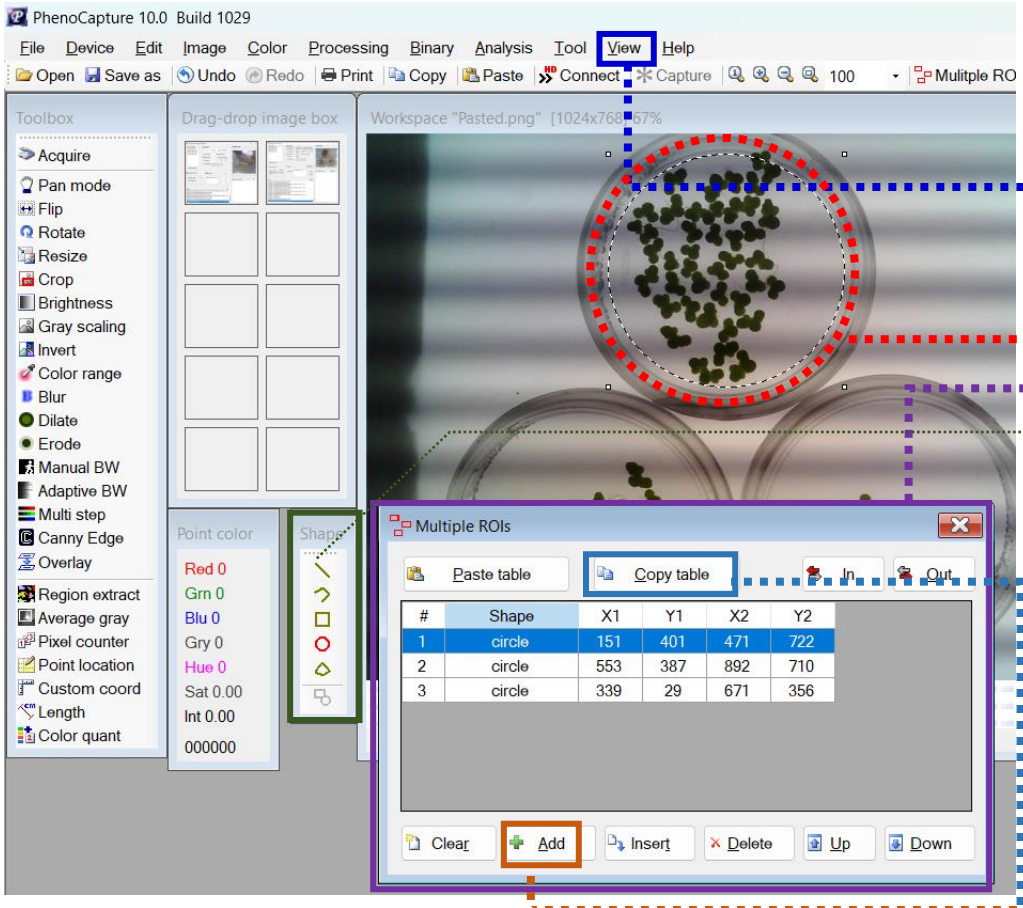

To easily generate ROI files for AniWellTracker, users can use the free PhenoCapture program developed by the author of SIPEREA. (www.phenocapture.com)

1. Launch PhenoCapture.
2. Load one of the source images.
3. Select 'Multiple ROI' from the 'View' menu to open the 'Multiple ROI' window.
4. Select the circle or rectangle icon from the 'Shape' tool menu.
5. Drag the cursor to make a circular or rectangular selection.
6. Click the 'Add' button to insert the current selection into the table.
7. Move or recreate the circular or rectangular selection.
8. Click the 'Add' button again to add the current selection into the table.
9. Repeat steps 7 and 8 to select all wells.
10. Click the 'Copy table' to export the contents of the table to the clipboard.

ROI.csv file generation

	A	B	C	D	E	F	G	H	I	J
1	Condition1	Condition2	Date	Plate#	Well#	Shape	X1	Y1	X2	Y2
2	Test	Control	Aug-19	1	1	circle	318	70	444	196
3	Test	Control	Sep-19	1	2	circle	506	74	632	200
4	Test	Control	Oct-19	1	3	circle	695	76	821	202
5	Test	Control	Nov-19	1	4	circle	319	259	445	385
6	Test			1	5	circle	507	264	633	390
7	Test			1	6	circle	693	266	819	392
8	Test			1	7					72
9	Test			1	8					77
10	Test			1	9	circle	690	453	816	579
11	Test	Control	2019-17	1	10	circle	314	633	440	759
12	Test	Control	2019-18	1	11	circle	503	636	629	760
13	Test	Control	2019-19	1	12	circle	689	640	814	764
14	Test	Control	2019-20	1	13	circle	314	819	439	943
15	Test	Control	2019-21	1	14	circle	500	821	625	945
16	Test	Control	2019-22	1	15	circle	686	823	811	947

Additional information that users may enter

Pasted from clipboard


Users can use Excel program to create a ROI file manually.

1. Create 10 columns from A to J as shown.
2. Enter a title for each column. That is, 'Condition1', 'Condition2', 'Date', 'Plate#', 'Well#', 'Shape', 'X1', 'Y1', 'X2', and 'Y2'. Users can change the number of wells.
3. Paste the table contents to a specific location in the Excel worksheet. ROIs are designated as 'Shape', 'X1', Y1', 'X2' and 'Y2'.
4. Enter text in the cell indicated by the blue box. All of this text does not affect image analysis.
5. Save as 'ROI.csv' in the folder containing the source images.
   (CSV: comma-separated text file format)
6. All done!

How to make program sharp when it's blurry

In File Explorer, place the mouse cursor on the program and press the right button of the mouse

When you run the program again, the screen appears clearly.

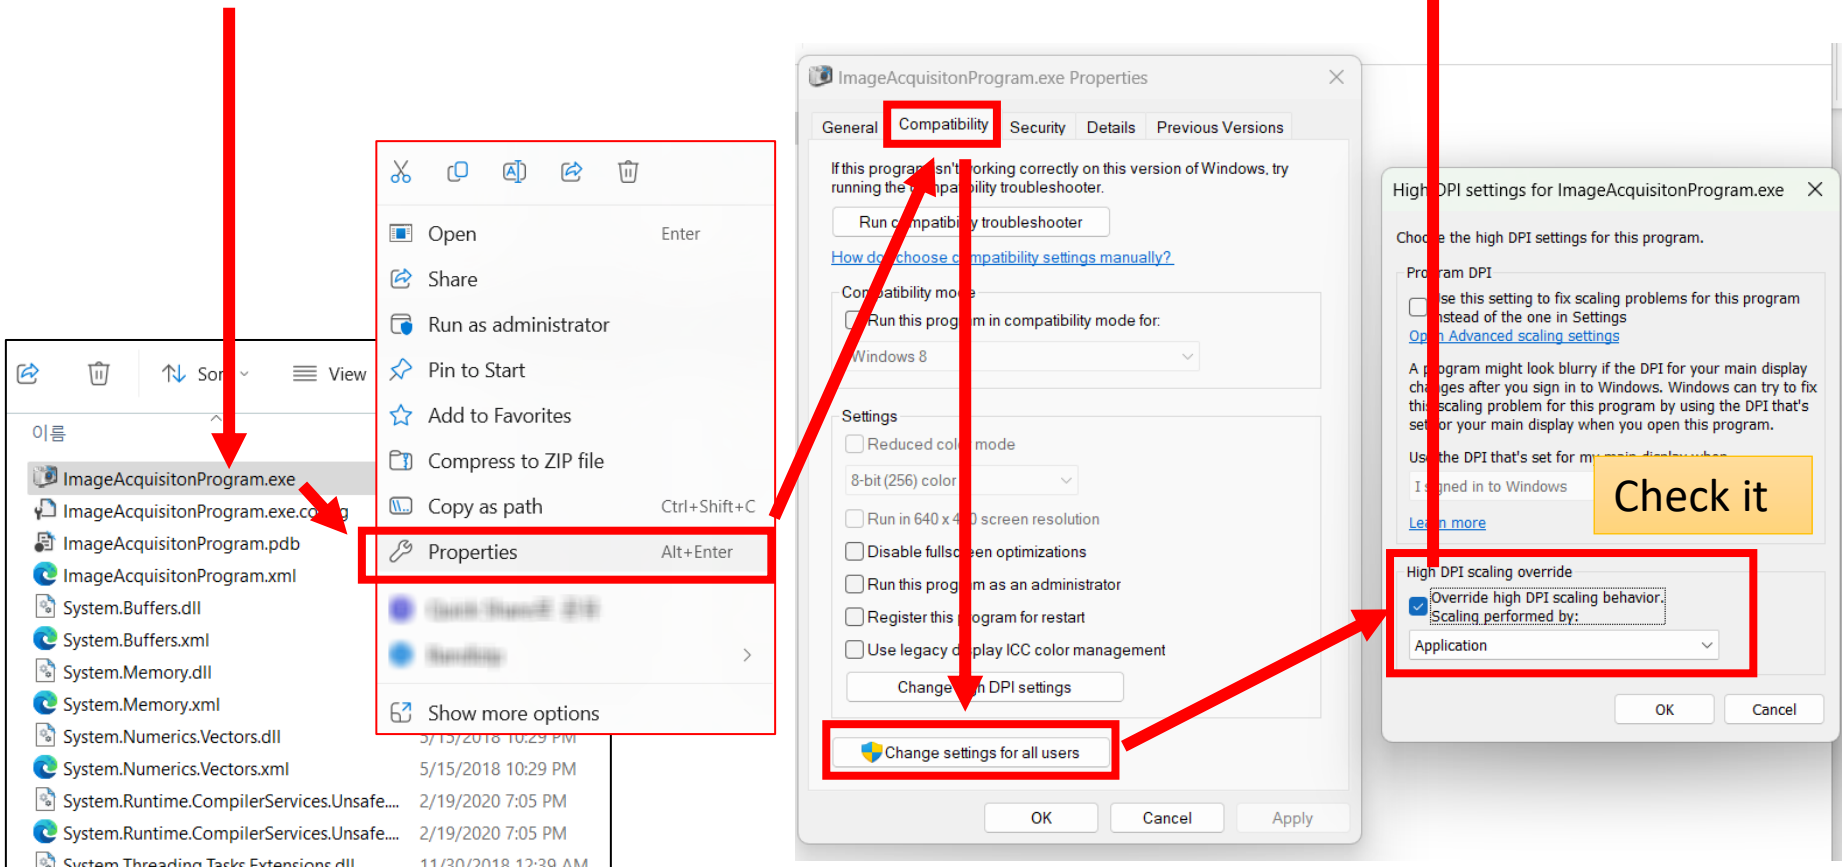

License info

BSD-3-Clause

SIPEREA IS DISTRIBUTED 'AS IS'. NO WARRANTY OF ANY KIND IS EXPRESSED OR IMPLIED. YOU USE THE PROGRAM AT YOUR OWN RISK.

Alternative license terms are available upon request.